

 
 




Programming a SWAP button on the Philips Digital Remote



1. Press the **"Cable"** button at the top of the remote to put it into Cable Box control mode.
2. **Press and hold** the **"Setup"** button until the "Cable" button blinks twice.
3. Type in the code **994**. The "Cable" button will blink twice.
4. Press (do not hold) the **"Setup"** button.
5. Type in the code **00236** (for Swap).
6. Press the **TV/VCR button** in the lower left corner of the remote.

Press 'Cable' device key	Then, press and hold 'Setup' (3 seconds)	Enter 9-9-4	Press 'Setup' once (do not hold)	Enter 0-0-2-3-6	Press 'TV/VCR' button
					
If programmed correctly, the Cable key will flash 2 times					